



Rev 1.0

Part #:

OLMA.70040.1

OLMA.70040.2

OLMA.70040.3

Application: 2013-2021 FRS and BRZ

Parts List:

① Mirror Glass - DS

② Mirror Glass – PS



Installation Instructions:


1 – Using the mirror adjustment switch in your car, position the mirror glass with the outer edge as far out as possible, as shown below.



2 – Next put your hand behind the mirror glass and plastic frame that the glass is attached too and pry outward towards the bottom of the glass. This should release the 2 clips holding it in place.



3 – Slide the glass down slightly to release the 2 hooks shown below in **Figure 1**. Then, if applicable, unplug the mirror heater wires and turn signal connections

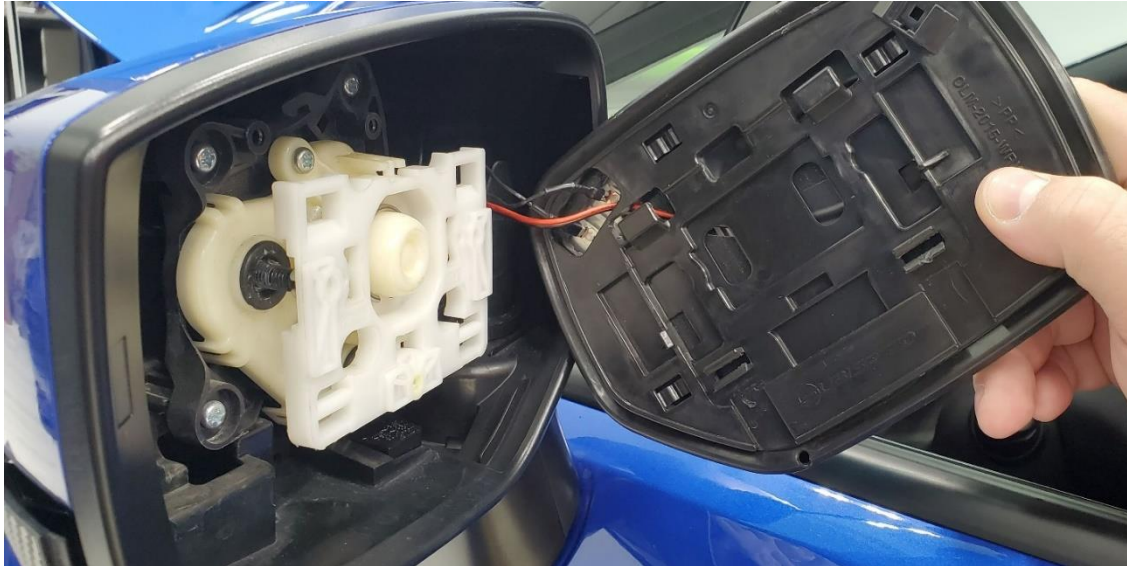

4 – Take your new OLM mirror glass and reattach any connections that are applicable from Step 3.

Note: Mirror heater wires can be plugged in to either mirror heater terminal.

5 – Then, seat the 2 hooks shown in step 3 back into their channels and then snap the mirror back into place by pressing where shown below.



6 – Repeat steps 1 – 5 on the opposite side of your vehicle.

7 – Your installation is complete, enjoy your new OLM mirror glass! If you have any questions Feel free to contact your OLM Dealer.

Revision table

Date	Version	Notes
4-11-2022	1.0	Creation